



Christmas Tree Assembly Instructions

1-Tree Stand • 1-Tree Top

2-Pole Sections with Branches (9 ft. and larger trees may have 3 sections)

1. Remove tree stand from plastic bag and adjust the legs to form a X shape.
2. Remove temporary plastic covers from the end of the pole sections with branches.
3. Set pole section "C" with branches into the stand. Insert and tighten screws.
4. Pull or cut the tie to allow the branches to fall into place.
5. Starting with the bottom row, open the leaves of the branches by separating the needles into different directions.

6. Set pole section "B" with branches into section "C" and remove the tie. Continue shaping each row until you reach the top.

Follow the enclosed diagram to determine proper electrical connections

7. Insert the Tree Top "A" bend and shape the tips by pulling them away from the center.

If assembling a prelighted tree, plug the extension from section "A" into the marked wiring harness on section "B".

NOTE: 9 ft. and larger trees may have a fourth or fifth section marked "D" or "E". In this case, section "D" or "E", respectfully is the bottom section. Follow the enclosed diagram to determine proper electrical connections.

THE BLACK TAPE USED ON THE WIRING HARNESS TAKE SHOULD ONLY BE REMOVED TO CHANGE A FUSE EXPOSING AND USING THE OUTLETS COVERED ON THE HARNESS MAY CAUSE A FUSE TO BLOW.

