


# INSTRUCTIONS FOR METAL BASE


Includes 2 screws in Polybag

1.

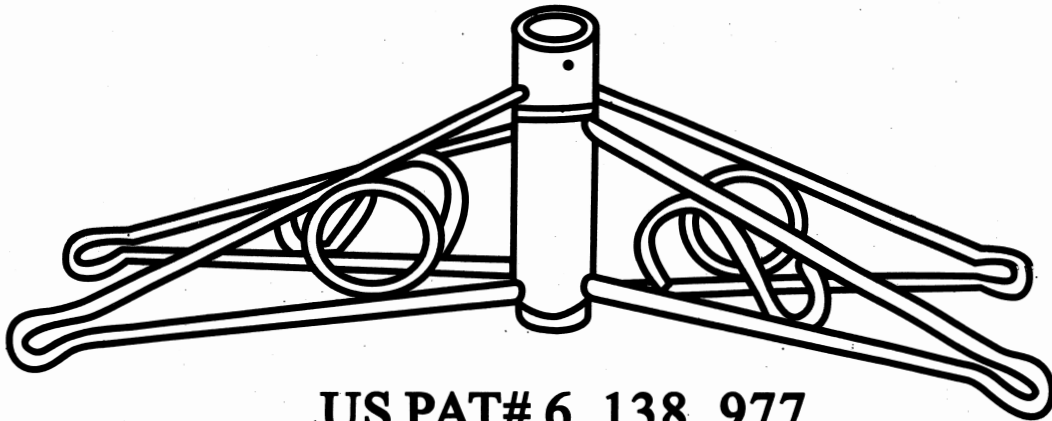

US PAT# 6, 138, 977

2.

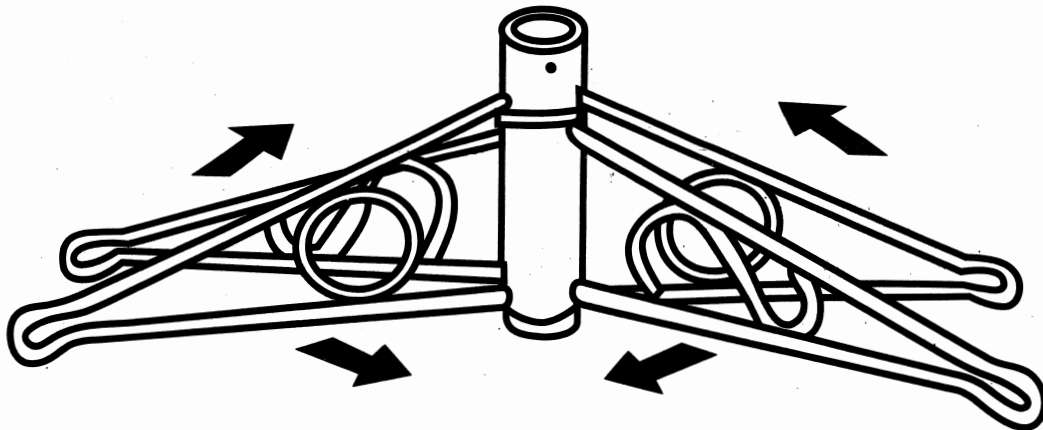

3.

